

<u>Function</u>	<u>Vertex Hand Held Radio</u>
Channel change	Press 'C' & enter channel number (for DEC 6## numbers use 4## instead)
Group Selection	Turn numbered knob on top of radio
	Note: Group knob can alter a set channel
Group 1:	DEC Ch 501 to 553
Group 2:	WAERN Ch 101 to 353
Group 3:	Simplex Ch 354 to 369
Group 4:	WAERN ch 371 to 400
Group 5:	DEC ch 601 to 653
Light	Short press Orange button
Low transmit Pwr	Press 'B'; symbol indicates on: Low
Scanning	Scan Group: Press 'D'; symbol indicates on: 0
	Scan all Groups: Press 'D' again
	Scan Off: Press 'D' again
Talk Around	Press 'A'; symbol indicates on: <->
Turn On/Off	Turn big volume knob
Unlock/Lock	Hold in orange button
Notes:	

1. Changing Group knob with power off will change the channel that radio starts on when radio is turned on.
2. Radio will not accept channels commencing with 6, enter 4 instead.
3. Buttons below Transmit switch on side of radio will move down/up channels.
4. Use Low Transmit power setting as standard. Turning off will increase transmit power, but reduce battery life.
5. Microphone clip can be rotated to suit function.